

Measurement Techniques for the Inspection of Coiled Pins

by Lisa A. Wells, Manager of Technical Services, and Michael J. Pasko, Application Engineer SPIROL International Corporation


Diameter


Coiled pin design is such that, diameter will be within specification over a minimum of 270° of the circumference. This design characteristic ensures that diameter at the seam will remain equal to, or less than, that at any other point in the plane of rotation. This feature prevents the seam from damaging the host component.

Diameter is measured utilising a micrometre. Micrometre measurements are taken at 0°, 45°, and 90° to the seam as depicted in the diagrams below. A micrometre with a reduced diameter anvil is used to measure very small pins. Regardless of anvil size, it is critical that the pin be centred between the upper and lower anvils. It is also critical that the micrometre not be tightened beyond the point at which it contacts the pin as excess compression may yield incorrect readings. Diameter is to be measured a minimum of one pin diameter in length from the end of the pin. This eliminates measurement error relating to the transition from chamfer to tenon diameter. For example, when measuring a Ø4.00mm coiled pin, diameter would be measured no closer than 4.00mm to the end of the pin.


Orientation at 0° to the seam

Orientation at 45° to the seam

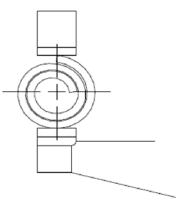

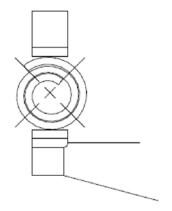

Orientation at 90° to the seam

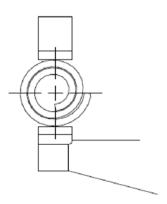




Length

The length of a coiled pin is easily measured utilizing a caliper or micrometer. It is critical that the pin be positioned squarely between the anvils of the measuring tool. See the photograph below:



Chamfer Diameter ('B' Max)

The chamfer diameter or 'B' maximum is designed to be smaller than the minimum recommended hole. This feature can be measured with a micrometer, caliper, or optical comparator. The easiest method by which to inspect is to open a micrometer to the specified 'B' max dimension, lock it, and ensure the pin 'catches' or fits between the upper and lower anvils. Please note the diagram, which demonstrates proper measurement technique utilizing a micrometer (most common method).

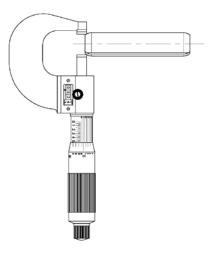



Hardness Inspection

Hardness is inspected utilising either of two methods. The preferred method is a microharness test. The second method is superficial Rockwell testing.

Superficial Rockwell testing can provide valid results if employed correctly. The Rockwell testing scale is determined by the thickness of the strip being tested. See below:


TABLE 1

HARDNESS TESTING SCALE BASED ON MATERIAL THICKNESS FOR FINISHED PRODUCTS

.001 to .015*	Vickers
.015 to .025	15N SCALE
.025 to .035	A-SCALE
.035 to .050	D-SCALE
.050 & UP	C-SCALE


*As indicated, strip measuring .001 to .015" thick, must be measured using the Vickers scale however, the Vickers scale may be used to measure any strip thickness.

To employ the superficial Rockwell test method, a strip of the pin must be removed perpendicular to its axis. The strip must then be placed on the anvil in such a manner that it is fully supported. Because a coiled pin is round, care must be taken to ensure the strip radius does not contact the top anvil. See the following diagrams for proper sample preparation and strip orientation in reference to the test anvil:

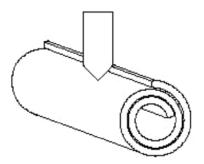




REMOVE TEST STRIP PERPENDICULAR TO PINS AXIS AS SHOWN

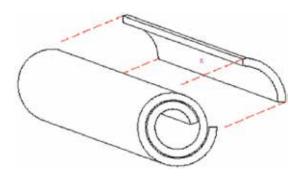

*Note 'X' marks correct test location at center of strip.

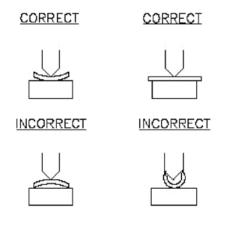


Micro-hardness testing of a coiled pin is the preferred method. To test using this method, the pin is cross-sectioned and one of the resultant pieces mounted for test. The mount is then polished to remove cutting marks. It is critical to note that the cutting and polishing operations must be performed with proper coolants to prevent excessive heating of the sample.





Photograph of a mounted and polished coiled spring pin. This pin is now prepared for microhardness inspection.

Once the mount has been polished, the pins are tested in the middle of the centre coil using the Vickers microhardness test method. Refer to the 'X' on the middle coil below.

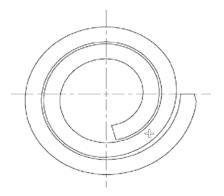

Proper test location on a coiled spring pin

The Vickers diamond must be placed at least 1 diamond width from the edge of the material. When taking multiple hardness readings, each diamond must be placed so that the distance between any two diamonds is greater than twice the distance of any stress deformation that may occur when the indent is made. All hardness numbers are reported in HV (hardness Vickers).



SPIROL has developed a list of appropriate Vickers microhardness test loads to be used based on the raw material thickness being inspected. Refer to table 2.

TABLE 2

Strip Thickness vs. Microhardness Test Load

Strip Thickness/ Inches	Load (Grams)
.000 through .001	100
.002 through .004	200
.005 through .007	300
.008 and up	500

Straightness Inspection

Per ASME B18.8.2-2000 and ASME B18.8.100M-2000, the straightness of a coiled pin should be measured with a straightness gauge as follows:

The straightness over the length of spring (coiled) pins shall be such that pins will pass freely through a ring gauge of length as documented in Table 3 for the respective pin lengths. The maximum diameter of the ring gauge hole must be equivalent to the maximum diameter of the pin free diameter plus the straightness diameter allowance documented in table 3.

Inch Coiled Pin Straightness Specifications			
Nominal pin length	Straightness Gauge length +/005"	Straightness Diameter Allowance (max pin diameter plus)	
Up to1" inclusive	1.000"	.007"	
1- 2" inclusive	2.000"	.010"	
Over 2"	3.000"	.013"	

TABLE 3

Metric Coiled Pin Straightness Specifications			
Nominal pin length	Straightness Gauge length +/005"	Straightness Diameter Allowance (max pin diameter plus)	
Up to 24mm inclusive	25 mm	.18mm Min20mm Max	
24-50mm inclusive	50 mm	. 30mm Min34mm Max	
Over 50mm	75 mm	.42mm Min48mm Max	



SPIROL Innovative fastening solutions. Lower assembly costs Lower assembly costs.



Please refer to www.SPIROL.co.uk for current specifications and standard product offerings.

SPIROL Application Engineers will review your application needs and work with you to recommend the optimum solution. One way to start the process is to visit our Optimal Application Engineering portal at SPIROL.co.uk.

No part of this publication may be reproduced or transmitted in any form or by any means, electronically or mechanically, except as permitted by law, without written permission from SPIROL International Corporation.

Technical Centres

Europe SPIROL United Kingdom 17 Princewood Road Corby, Northants

NN17 4ET United Kingdom Tel. +44 1536 444800 Fax. +44 1536 203415

SPIROL France Cité de l'Automobile ZAC Croix Blandin 18 Rue Léna Bernstein 51100 Reims, France Tel. +33 3 26 36 31 42 Fax. +33 3 26 09 19 76

SPIROL Germany Ottostr. 4 80333 Munich, Germany Tel. +49 89 4 111 905 71 Fax. +49 89 4 111 905 72

SPIROL Spain 08940 Cornellà de Llobregat Barcelona, Spain Tel. +34 93 669 31 78 Fax. +34 93 193 25 43

SPIROL Czech Republic Sokola Tůmy 743/16 Ostrava-Mariánské Hory 70900 **Czech Republic** Tel. +420 417 537 979

SPIROL Poland Aleja 3 Maja 12 00-391 Warszawa, Poland Tel. +48 510 039 345

Americas

SPIROL International Corporation 30 Rock Avenue

Danielson, Connecticut 06239 U.S.A. Tel. +1 860 774 8571 Fax. +1 860 774 2048

SPIROL Shim Division 321 Remington Road Stow, Ohio 44224 U.S.A. Tel. +1 330 920 3655 Fax. +1 330 920 3659

SPIROL Canada 3103 St. Etienne Boulevard Windsor, Ontario N8W 5B1 Canada Tel. +1 519 974 3334 Fax. +1 519 974 6550

SPIROL Mexico Avenida Avante #250 Parque Industrial Avante Apodaca Apodaca, N.L. 66607 Mexico Tel. +52 81 8385 4390 Fax. +52 81 8385 4391

SPIROL Brazil Rua Mafalda Barnabé Soliane, 134 Comercial Vitória Martini, Distrito Industrial CEP 13347-610, Indaiatuba, SP, Brazil Tel. +55 19 3936 2701 Fax. +55 19 3936 7121

Pacific

Asia SPIROL Asia Headquarters

1st Floor, Building 22, Plot D9, District D No. 122 HeDan Road Wai Gao Qiao Free Trade Zone Shanghai, China 200131 Tel. +86 21 5046 1451 Fax. +86 21 5046 1540

SPIROL Korea

160-5 Seokchon-Dong Songpa-gu, Seoul, 138-844, Korea Tel. +86 21 5046-1451 Fax. +86 21 5046-1540

email: info-uk@spirol.com

